

## Safety Wall Padding Installation of 72" High Nail Margin

### What you will need




**DRILL**



**PENCIL**




**LEVEL**

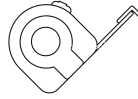

**TAPE MEASURE**



**LADDER**

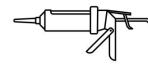

\*Not Required  
**Liquid Nail**



\*See notes  
**Wall Anchor**

**Anchor Selection** - To determine the best anchor for your padding you must first determine your wall type. If installing directly into a solid wood most any wood screw of 1 1/4" minimum length will work. If you are dealing with drywall or masonry an anchor will be required. For its versatility in drywall and concrete block, we recommend the Hillman Wall Dog 1-1/2 in.

**Step 1** - To begin the installation of your hard backed safety wall padding mark the wall at the top of where the panel will be mounted. ASTM recommends 4" from floor to foam or 3" to wood. For a 72" panel with a nail margin mark 75" from floor to adhere to this recommendation.




**Step 2** - Mount provided trim piece on the wall halfway up panel height 32.5" above floor in a horizontal direction. This piece is non-weight-bearing, will alleviate wrinkling and improve over appearance



**Step 3** - Pre-drill holes in all four corners of nail margins approximately 2" in from sides, and centered in 1" margin, with appropriate sized bit for anchors being used.




**Step 4** - Now that you have prepared your wall and your wall padding, you are ready to begin your installation. At this point you may apply liquid nail in a zig zag on back of panel for a more secure adhesion (This is not necessary but may be more useful in some scenarios). After this is complete align your first panel in its starting location using top wall mark for height, verify level vertical and horizontal, and anchor top corner into place, verify level once more and anchor remaining three corners.

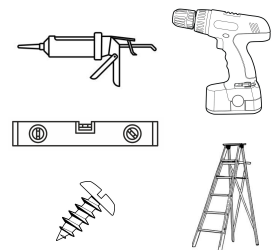

**Step 5** - Repeat steps 1-4 with each subsequent panel tight to the previous, ensuring level alignment as you proceed with your installation

**Step 6** - Final adjustments, cleaning, and touch up. Once you have completed your installation, panels can be wiped clean with a low PH cleaner. Any paint touch ups can be done after cleaning, and given 24 hours to cure before wiping clean again.

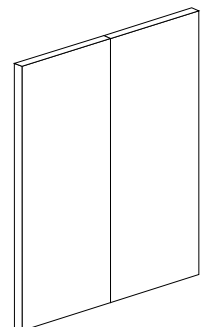

**\*Additional Notes:**

If graphics are part of your project, panels will be marked on back bottom of panel with graphic name, and number.

Additional material may be supplied (Touch up paint, vinyl, vinyl adhesive)

**You Tube Install Video Link :** <https://www.youtube.com/watch?v=k92jDOmY9gl>